How to set up internet of Ceres WR135G

Device Model No.:WR135G

Question Category:Internet Setting


The WR135G wireless router can provide wired and wireless networks for computers, mobile phones and other terminals at the same time, and realize broadband shared Internet access. This article introduces how to set up a router to access the Internet with a computer.

Connection line

1

1. Connect the network cable to the WAN port of WR135G;


2. Connect computer to any of the WR135G's 1, 2, 3, 4 LAN ports through a network cable, wireless devices such as laptops and smart phones are connected to the WR135G factory wireless signal through wireless connection (the factory wireless signal name SSID can be viewed on the sticker on the bottom of the router , The factory is not encrypted);

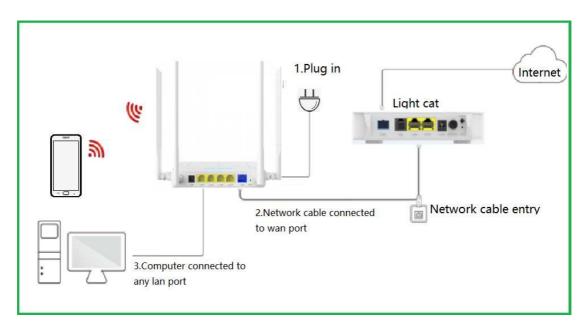

Note: When the WAN port or LAN port of the router is plugged into the network cable, the corresponding indicator will flash. If there is no response when the network cable is inserted, please check the network cable and the corresponding interface.

2 Set up the router to go online

1. Open the browser, enter management IP (refer to the sticker on the bottom of the router) or "www.ceres.com" in the address bar, click Enter or Return Key to enter the router login page, the factory login password is admin (refer to the sticker on the bottom of the router), click Login button.

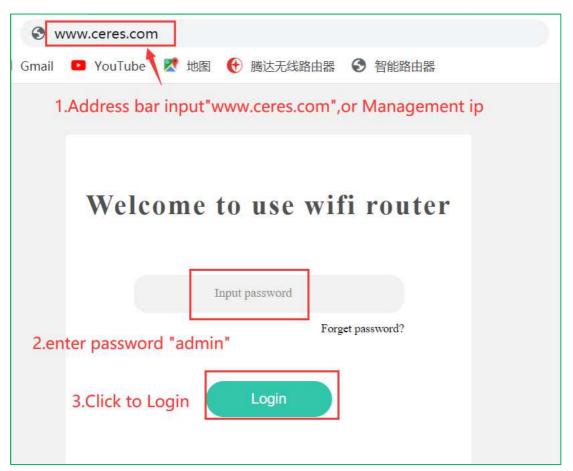

2. The system enters the setup wizard interface (the setup wizard interface will appear when logging in for the first time)

The router has 3 ways to connect to the Internet. Choose the Internet method according to your needs and fill in the corresponding parameters. The setup wizard has three Internet methods. Click the link below to view the detailed steps of the corresponding Internet method: ①Dynamic IP

2PPPoE3Static IP

Case 1: Choose dynamic IP as the Internet access method

1. Click "Next" when selecting the Internet access method as dynamic IP.

This mode is suitable for internal networks, and you can go online directly after connecting to the router.

Enter the management page					
Internet setup	Type Dynamic IP Dynamic IP is generally suitable for internal networks. Once connected to a router, it can be accessed directly.	<u>Skip steps</u>			

2. Set the WI-FI name and password of WR135G, and click "Next"

	Enter the management page					
Internet setup			<u>Skip steps</u>			
	WI-FI configuration WI-FI name Password	Ceres Hide wireless 12345678 Previous Next				

3. Set the administrator password and click "confirm"

Enter the management page					
Password configuration					
New	admin				
Confirm	12345				
	Previous				

4. After the setting is completed, wait for a while, it will return to the waiting interface, enter the new management password, login to the router management interface to check, it shows "Connected", you can go online.

	Enter the manag	ement page
Network connection state	Internet	

Case 2: Choose PPPoE as the Internet access method

1. Enter the broadband account and broadband password provided by the broadband operator and click "Next"

If you forget the broadband account password, you can contact the operator for inquiries.

	Ente	r the manage	ment page
Internet setup	Type Static		I the operator to get them
	IP	Input ip	
	Mask	Input mask	2
	Gateway	Input gateway	
	DNS1	Input DNS	
		Next	3

2. Set the WI-FI name and password of WR135G, and click "Next"

Enter the management page						
Internet setup			<u>Skip steps</u>			
	WI-FI configuration WI-FI name Password	Ceres I Hide wireless 12345678 Previous Next				

3. Set the administrator password and click "confirm"

Enter the management page					
Password configuration					
New	admin				
Confirm	12345				
	Previous Confirm				

4. After the setting is completed, wait for a while, it will return to the waiting interface, enter the new management password, login to the router management interface to check, it shows "Connected", you can go online.

Enter the management page					
Network connection state	Internet				

Case 3: Select static IP as the Internet access method

1. To select a static IP, you need to fill in information such as an Internet-enabled IP address, and then click "Next" for details as shown below:

Enter the management page					
Internet setup		r ip or mask, you can ca	•		<u>Skip steps</u>
	IP	Input ip			
	Mask	Input mask	2		
	Gateway	Input gateway			
	DNS1	Input DNS			
		Next	3		

2. Set the WI-FI name and password of WR135G, and click "Next"

	Enter the management page					
Internet setup						<u>Skip steps</u>
	WI-FI configuration WI-FI name Password	Ceres 12345678 Previous	Next	Hide wireless		

3. Set the administrator password and click "confirm"

Enter the management page					
Password configuration					
New	admin				
Confirm	12345				
	Previous				

4. After the setting is completed, wait for a while, it will return to the waiting interface, enter the new management password, login to the router management interface to check, it shows "Connected", you can go online.

	Enter the manag	ement page
Network connection state	Internet	